

SÓLAS

CONTEMPORARY FIRE

ONE6
DIRECT VENT LOG SET KIT
PART #: LGS-16

INSTALLATION MANUAL

ONLY FOR SÓLAS MODELS: SL-16N, SL-16P



WARNING

This log set kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the Authority Having Jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion or production of carbon monoxide may result causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.

NOT FOR USE WITH VENT FREE OR OUTDOOR FIREPLACES

INSTALLER: Leave this manual with the appliance | **CONSUMER:** Retain this manual for future reference

LOG SET INSTALLATION

Kit Contents:

- (1) Ceramic Log
- (1) Ceramic Rock
- 7oz Lava Rock
- Metal Logset burner top
- Burner Top Gasket

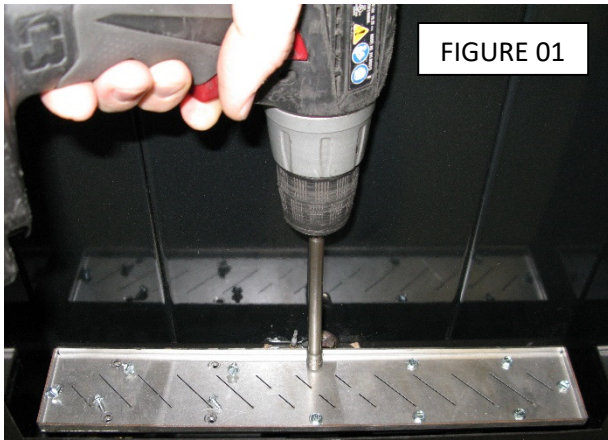


FIGURE 01

Step #1

Your fireplace will have shipped from the factory with the Glass Media burner top in place, before installing the logset burner top, we need to remove the glass burner top. The burner top is held in place by (12) #8 x 3/8" sheet metal screws using a 1/4" nut driver around the perimeter of the burner, remove these screws. Keep these screws in a safe place as they will be needed to secure the valve bracket again once the logset burner is installed. (Figure 01)

Step #2

When the glass media burner top has been removed, remnants of the old gasket will likely remain on the burner base, carefully remove these gasket remnants so all that remains is a clean surface for the new gasket. If the surface is not cleaned properly, you may encounter gas leaking from the edge of the burner top. (Figure 02)

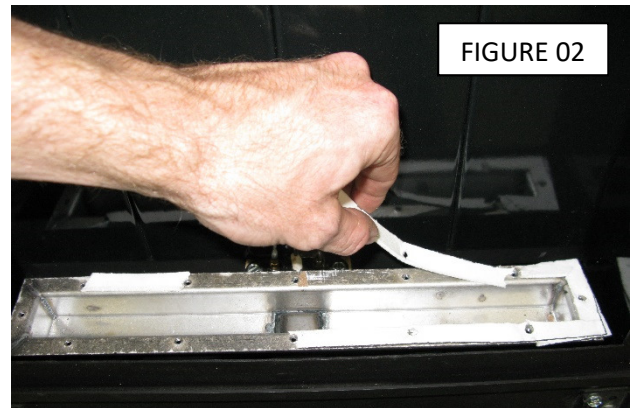


FIGURE 02

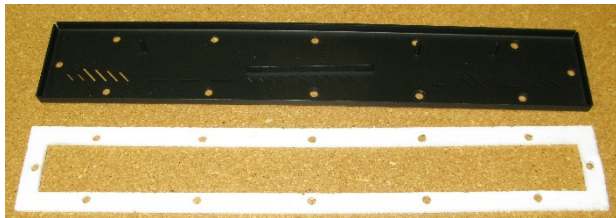


FIGURE 03


Step #3

This Log set kit will include a burner top and replacement burner top gasket. Take care when handling the burner top gasket as it can tear easily. (Figure 03)

LOG SET INSTALLATION

Step #4

Align the burner top gasket on the burner base as shown, check that all holes in the gasket are aligned with the holes in the burner base as shown in figure 04.

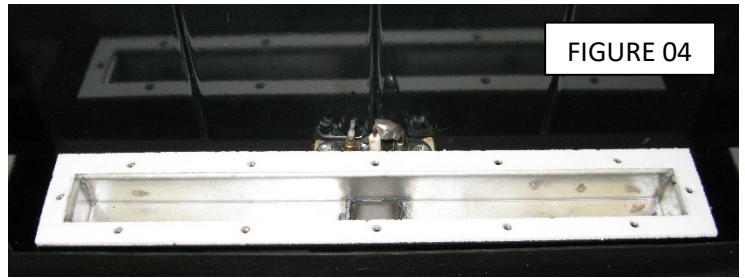


Step #5

Align the burner top on the burner top gasket as shown in figure 05, check that all holes in the burner top are aligned with the holes in the burner top gasket and burner base. The burner top is not symmetrical, there should be 1 pin left of the pilot and 2 pins right of the pilot.



Step #6

Secure the burner top using the (12) #8 x 3/8" sheet metal screws set aside from step #1 using a 1/4" nut driver, as shown in figure 06.

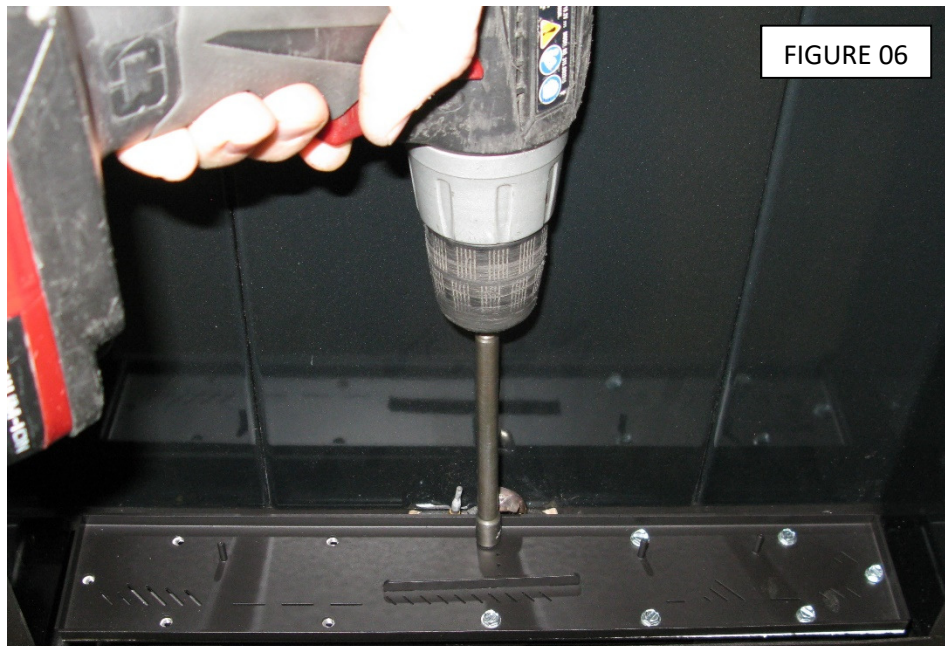


LOG SET INSTALLATION

With the burner top installed, the fireplace is now ready to have the Ceramic Log Set installed.

Step #7

Install the 3-rock cluster on the 2 pins located just right of the pilot. (Figure 07)

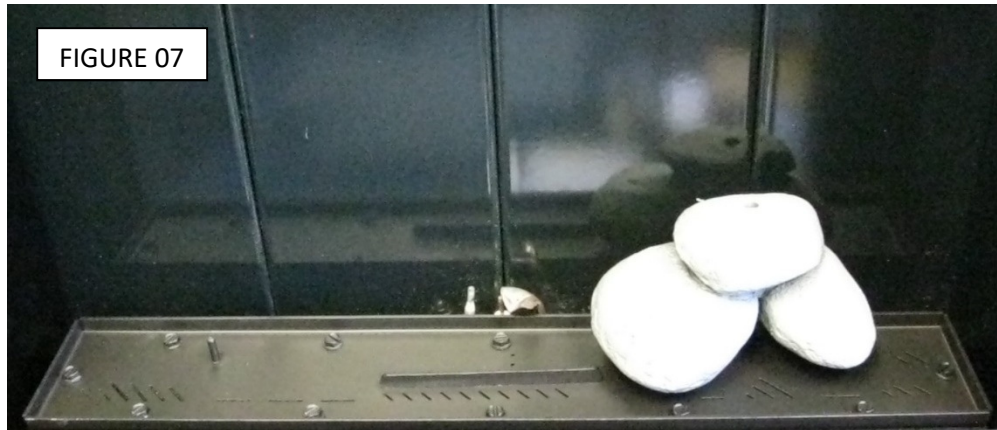

Step #8

Install the center birch log by placing the left side of the log on the locating pin left of the pilot. The right side of the log will rest on top of the 3-rock cluster, rotate the log so it gently touches the rear enamel panel of the firebox. (Figure 08)



LOG SET INSTALLATION

Step #9

Evenly distribute the included 7oz of lava rock on the exposed burner top. Cover the burner top completely but do not compress or “pack” the lava rock tightly. Pay special attention to tight and hard to reach areas when placing the media on the burner. It is ok if small amounts of lava rock are lost over the edge of the burner. (Figure 09)



Installation is now complete, refer to the ONE6 owner's manual for instructions on final assembly and lighting of the appliance.

